


# ROVECONCEPTS

kaye COLLECTION

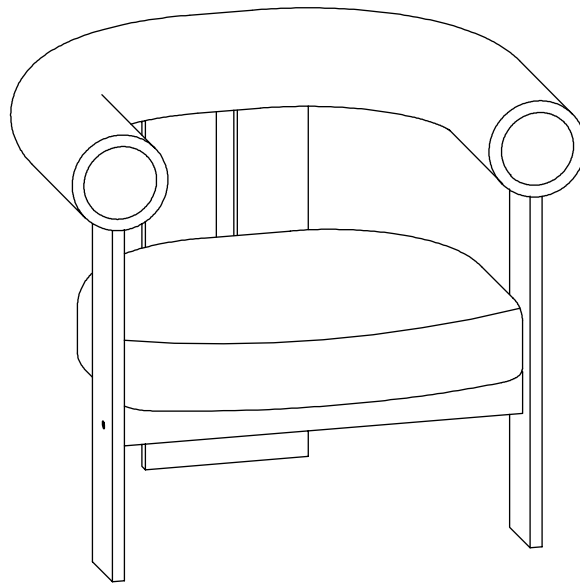


## TOLA OUTDOOR LOUNGE CHAIR ASSEMBLY INSTRUCTIONS

# HARDWARE



**A**

x14  
1/4 \* 15

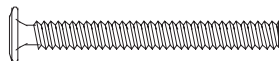

**B**

x2  
1/4 \* 90




**C**

x2  
1/4 \* Ø10 \* 13




**D**

x1  
K4

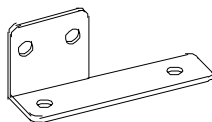

**E**


x1

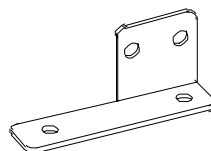

**F**


x1

# STEP 1

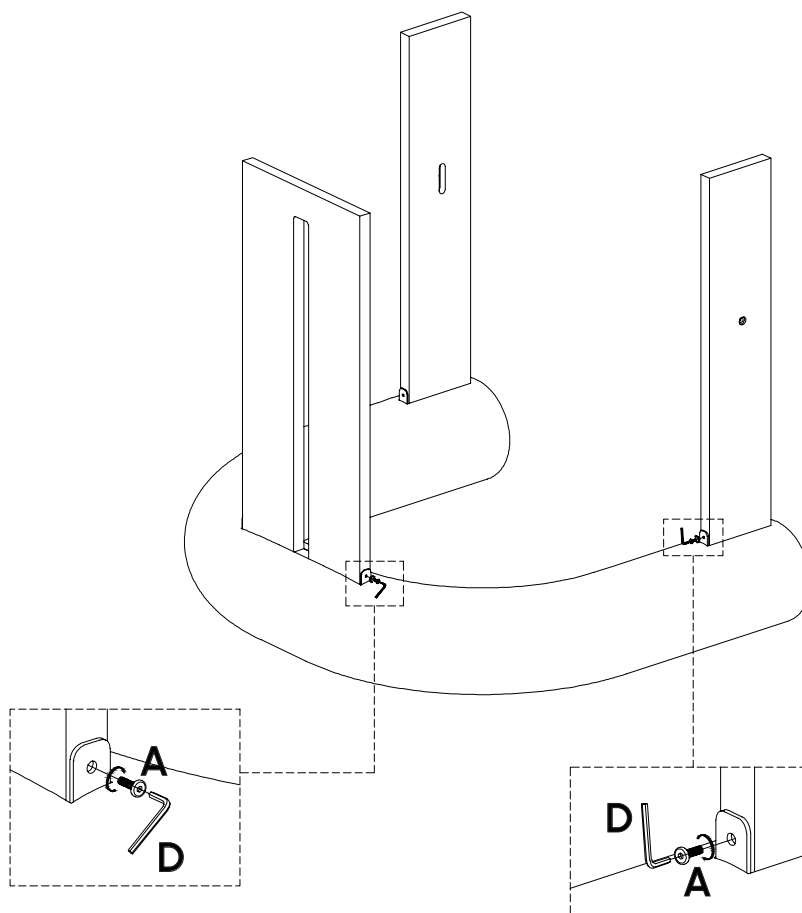


# STEP 2

ROVECONCEPTS

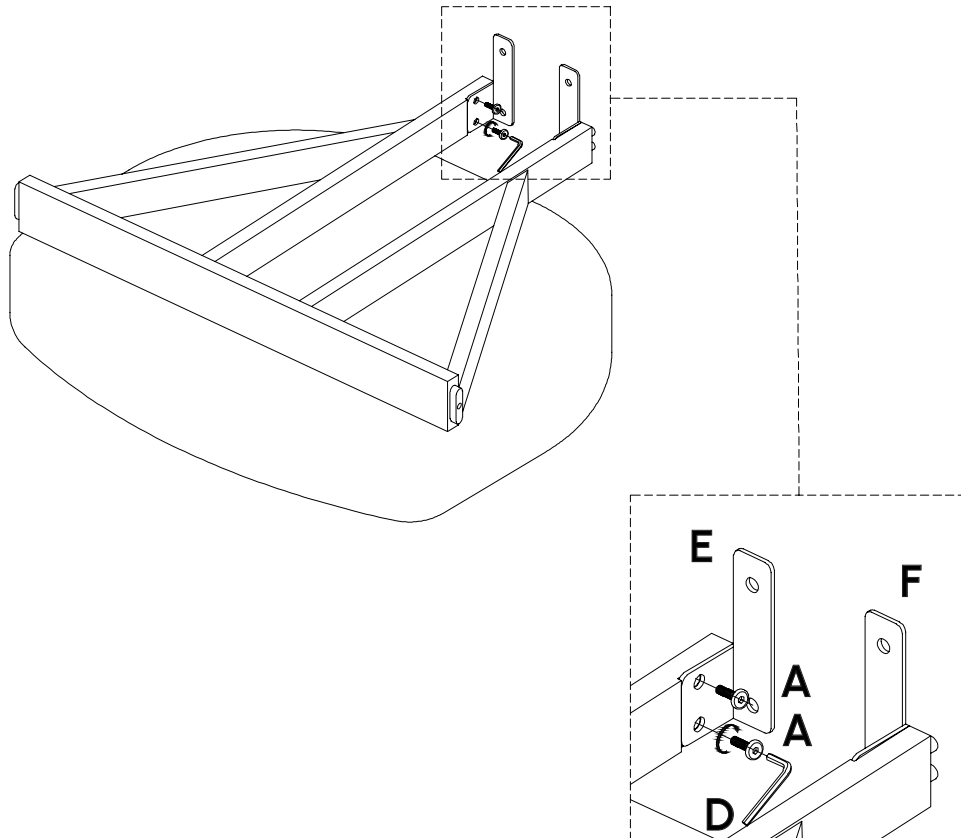


# STEP 3

ROVECONCEPTS

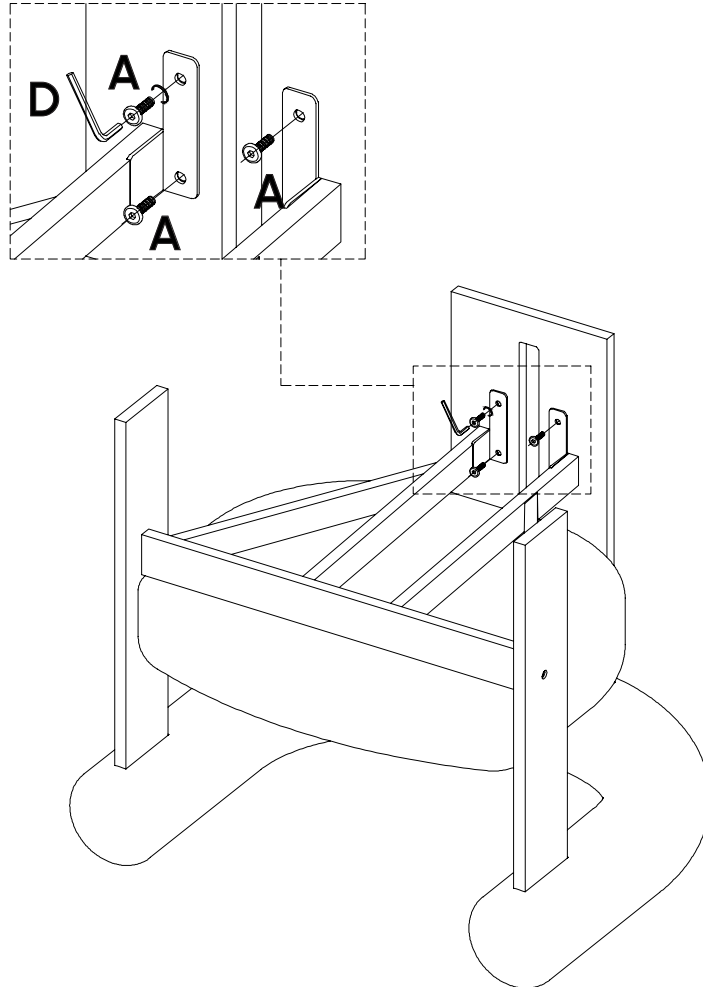


# STEP 4

The nut (C) needs to be turned and facing (B) to tighten the screws.

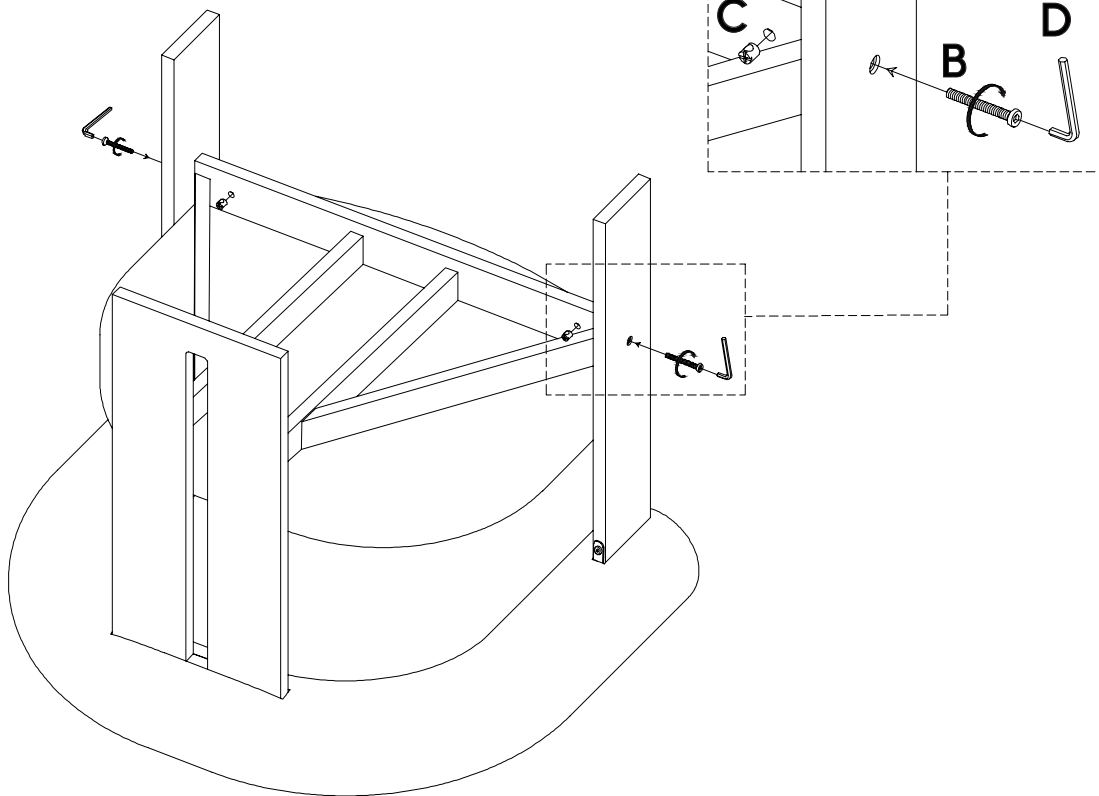

# STEP 5

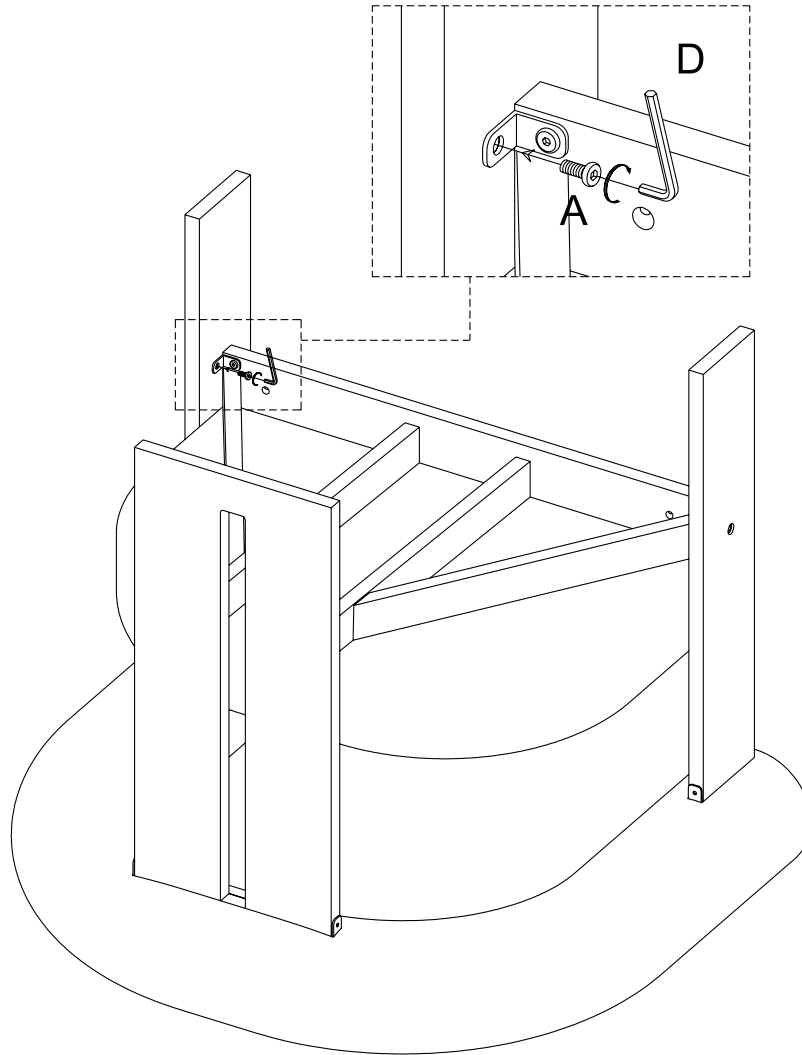

# STEP 5

